

展开尺寸：350x180mm, 折后尺寸：70x90mm

背面

 
RISEMODE
CONTROLLER DEVICE
VISION SOUND 01



RISEMODE.COM

Quick Start Guide

- 1** Download and install the Controller Device Vision Sound app.



Windows
Mac os

 
- 2** Connect Controller Device Vision Sound directly to a USB port on your PC/Mac, and then launch the corresponding application.

* USB hub/docking is not recommended



Quick Start Guide

- 3** Launch the app to customize Controller Device Vision Sound. Drag actions from the right panel and drop them onto your desired keys/knob on the left.



- 4** Configure your actions and personalize keys with custom icons—for best results use 126x126 pixels .jpg or .png files.

 


- 5** Drag and drop "Create Folder" onto a key. Then drag and drop actions into that folder.




Quick Start Guide


Tap the back key to exit a folder and return to your main configuration.



 - 6** Right-click keys to copy, paste or delete them.

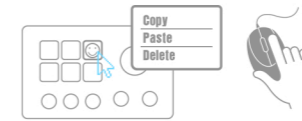

 - 7** Use the special stand holder to get the best support.

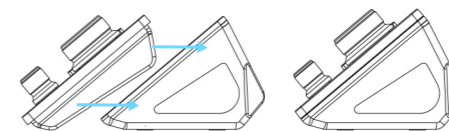


Technical Parameter

Product Name	Controller Device Vision Sound
Basic Configuration Specs	Number of keys: 6 Number of knobs: 3
	Voltage: 5V Connection method: wired Interface: USB-C
Dimension	131*80.2*68.4 mm
Material of Keycaps	Acrylic
Material of Top panel/ Bottom Shell/Plate	ABS
Switch	Silicone
Material of knob	Aluminum alloy
Contents of the Box * Quantity	Controller Device Vision Sound *1 USB 2.0 Type-A to Type-C Cable *1 User manual *1
Cable Length	1.5m
Colors	White/Black
Operating Systems	Windows 7 64bit or newer macOS 10.15 or newer

MADE IN CHINA

Guia Rápido

 - 1** Baixe e instale o aplicativo Controller Device Vision Sound

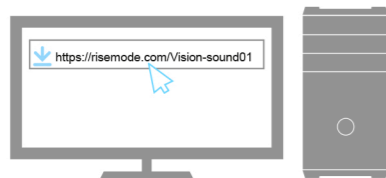

Windows
Mac os

 
- 2** Conecte o dispositivo controlador Vision Sound diretamente a uma porta USB no seu PC/Mac e, em seguida, inicie o aplicativo correspondente.

* Hub/docking USB não é recomendado



Guia Rápido

- 3** Inicie o aplicativo para personalizar o Controller Device Vision. Arraste as ações do painel direito e solte-as nas teclas desejadas à esquerda.



- 4** Configure suas ações e personalize chaves com ícones customizados para obter melhores resultados, use arquivos .jpg ou .png de 126x126 pixels.

 


- 5** Arraste e solte "Criar pasta" em uma chave. Em seguida, arraste e solte ações nessa pasta.




Guia Rápido


Toque na tecla voltar para sair de uma pasta e retornar a sua configuração principal.



 - 6** Clique com o botão direito nas teclas para copiá-las, colá-las ou excluí-las.



 - 7** Utilize o suporte especial para obter o melhor suporte.

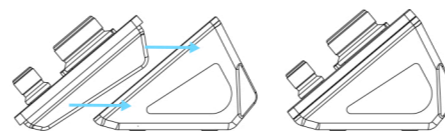

Parâmetro técnico

Nome do produto	Controller Device Vision Sound
Especificações de configuração básica	Número de Teclas: 6 Número de botões: 3
	Tensão: 5V Método de conexão: com fio Interface: USB-C
Dimensões	131*80.2*68.4 mm
Material das teclas	Acrílico
Material do painel superior/inferior/placa	ABS
Switch	Silicone
Material do botão	Liga de alumínio
Conteúdo da caixa *Quantidade	Controller Device Vision Sound *1 Cabo USB 2.0 Tipo A para Tipo C *1 Manual do usuário *1
Comprimento do cabo	1,5m
Cores	Branco/Preto
Sistemas Operacionais	Windows 7 64 bits ou mais recente MacOS 10.15 ou mais recente

MADE IN CHINA

RISEMODE
RISEMODE.COM