



风琴折，单黑说明书  
 材质：120g 铜版纸  
 成品尺寸：100\*75mm



## INSTRUCTION MANUAL KIT FAN MAGNETO PRO

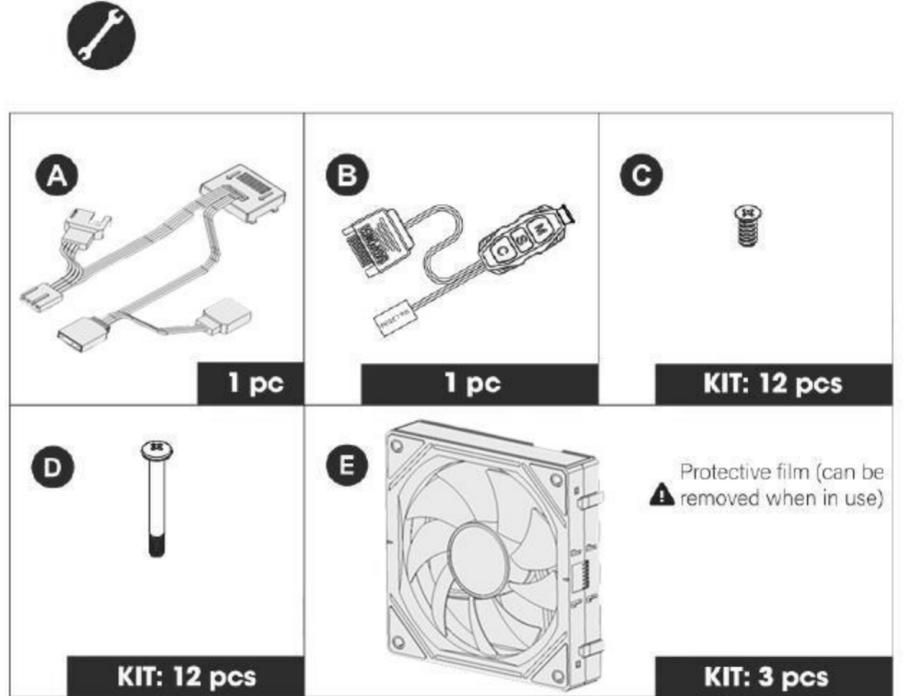


### 1 CABLE INSTALLATION AND REMOVAL

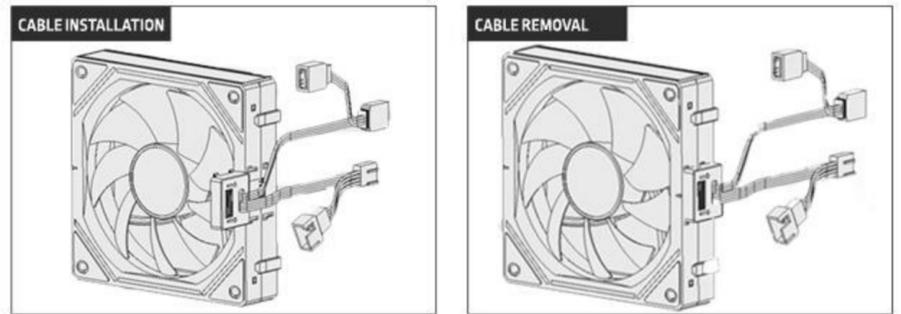


1

#### CONNECTOR INSTALLATION TO MOTHERBOARD

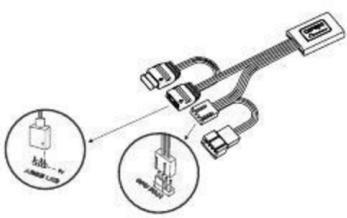


#### CONNECTOR INSTALLATION TO MINI CONTROLLER

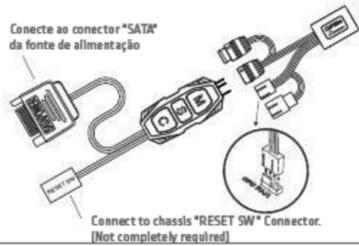


### 2 FAN ASSEMBLING AND REMOVAL

#### FAN ASSEMBLING

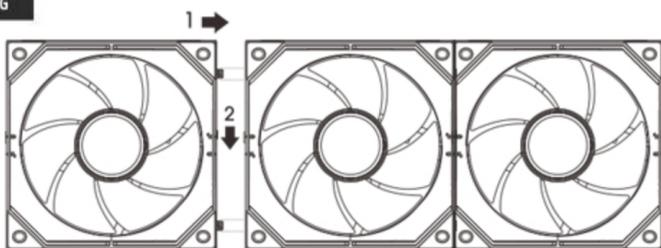

#### FAN REMOVAL

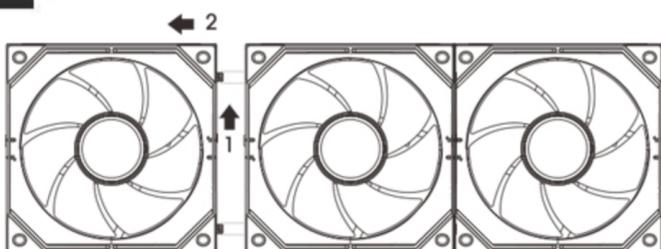

2

### 3 MINI CONTROLLER INSTRUCTIONS

#### "M" Key:

Click to switch the next light mode to circulate in all modes. Long press the "M" key to enter/exit the music mode, and click on the type of music mode in the music mode.

#### "S" Key:


Click to switch the light speed, cycle between 5 classes;  
 In the monochrome constant light mode, click the adjustment of the lighting of the light to circulate between the 4 classes.  
 In the music mode, press the "S" key to regulate the sensitivity and cycle between the 3 classes;  
 In any mode, long press the "S" key to turn off the light for 2 seconds. (After the light is turned off press "M" or "C" to restore the lights)

#### "C" Key:

Click the "C" key in any mode, you can switch to the monochrome constant light mode, click the Switch to the color again, and circulate between 7 colors.

**"RESET" Key:** (such as the "Reset SW" interface connected to the mini controller connects the "Reset SW" connector on the chassis)

Click the Reset key to switch mode on the chassis; (including the music mode)  
 Press the RESET key on the chassis for 2 seconds to turn off/turn on the light.

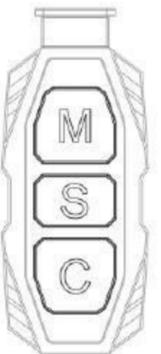

#### Notice:


1 connector or 1 controller can install up to 4 pieces at the same time. Do not install more than 4 fans at the same time, otherwise it may damage the equipment.

3



风琴折，单黑说明书  
 材质：120g 铜版纸  
 成品尺寸：100\*75mm



## MANUAL DE INSTRUÇÕES KIT FAN MAGNETO PRO

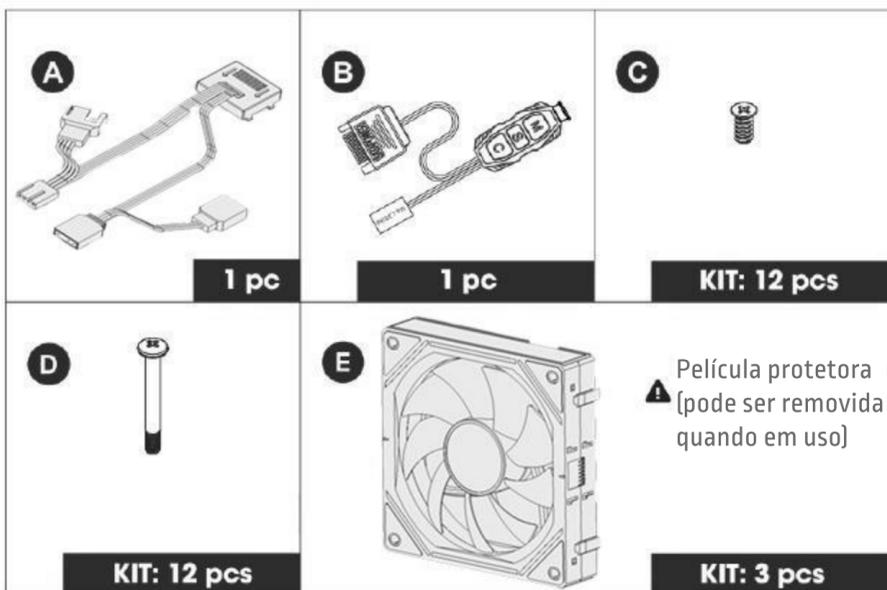


### 1 INSTALAÇÃO E REMOÇÃO DE CABOS

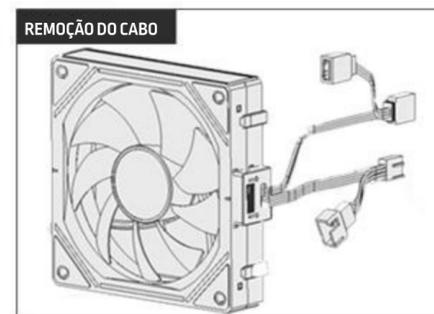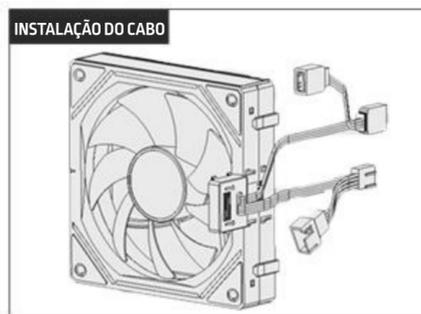


1

### INSTALAÇÃO DO CONECTOR NA PLACA MÃE

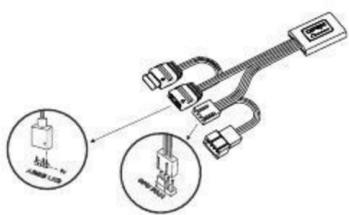


### INSTALAÇÃO DO CONECTOR NO MINI CONTROLADOR

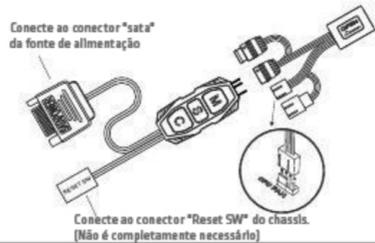


### 2 MONTAGEM E REMOÇÃO DO FAN

#### MONTAGEM DO FAN

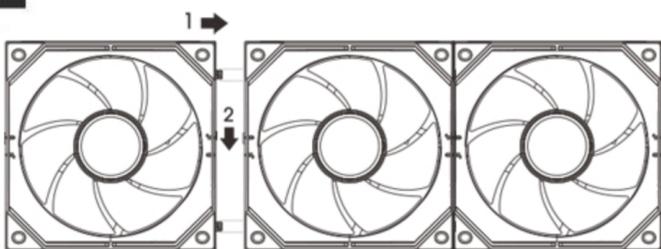

#### REMOÇÃO DO FAN

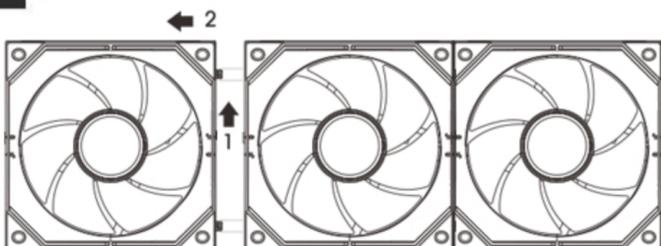

2

### 3 INSTRUÇÕES DO MINI CONTROLADOR

#### Tecla "M" :

Clique para alternar o próximo modo de luz para circular em todos os modos. Pressione e segure a tecla "M" para entrar/sair do modo de música e clique no tipo de modo de música que deseja dentro do modo de música.


#### Tecla "S" :

Clique para mudar a velocidade da luz, alterne entre 5 classes;  
 No modo de luz monocromática constante, clique no ajuste da iluminação da luz para circular entre as 4 classes.  
 No modo música, pressione a tecla "S" para regular a sensibilidade e alternar entre as 3 classes;  
 Em qualquer modo, pressione e segure a tecla "S" para desligar a luz por 2 segundos. (Depois que a luz for desligada, pressione "M" ou "C" para restaurar as luzes)

#### Tecla "C" :

Clique na tecla "C" em qualquer modo, você pode alternar para o modo de luz monocromática constante, clique na tecla para alternar as cores novamente e irá circular entre as 7 cores.

**Tecla "RESET" :**(Com a interface "Reset SW" conectada ao mini controlador conecte o conector "Reset SW" no chassis)  
 Clique na tecla "Reset" para alternar o modo no chassis; (incluindo o modo de música)  
 Pressione a tecla "Reset" no chassis por 2 segundos para desligar/ligar os leds.

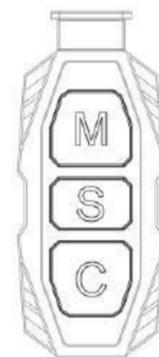

**Aviso:**  
 1 conector ou 1 controlador pode instalar até 4 peças ao mesmo tempo. Não instale mais de 4 fans ao mesmo tempo, caso contrário poderá danificar o equipamento.

3