
RISE

INSTRUCTION MANUAL GM1
MECHANICAL KEYBOARD

CREATE FOR GAME

RISE

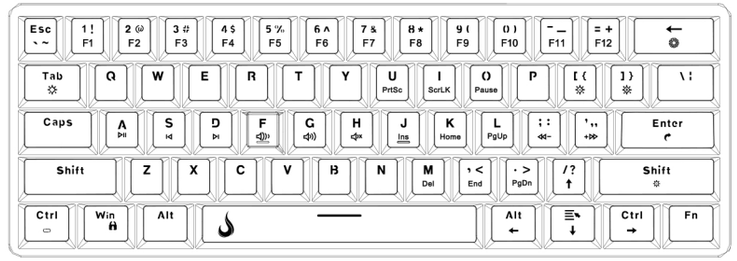

Keyboard Specification:

Interface Type: USB Type-C
Size: 292*102*39mm
Operating Voltage: 5V±0.5V
Operating Current: ≤300mA
Key Life: 50,000,000 times
Cable length: 1.5m
Compatible with Windows 2000/XP/Vista/Win7/Win8/Win10

Connecting With Your Computer

1.Turn on your computer.
2.Insert the USB interface of keyboard into a USB port of your computer (better choose the USB port locating on the back of the chassis instead of those on the front)
3.Wait for 1 minute, and your keyboard will automatically read by your computer with no extra driver needed.

(Note: This is a plug & play keyboard no need of any driver.)

LED Backlit Adjustment:

1.FN+ [←] : 21 Lighting modes switch

2.FN+ [Enter] : Restore keyboard factory settings

3.FN+ [Ctrl] : Turn on/off the backlit

4.FN+ [Shift] : Backlight color switching

FN+ [ )] :Backlit brightness increasing,there are 5 grades of backlight brightness.

FN+ [( ] :Backlit brightness decreasing,there are 5 grades of backlight brightness include 1grade to turn it off.

FN+ [Esc] :Backlit movement speed increasing,there are 5 grades of backlight movement speeds.

FN+ [: ;] :Backlit movement speed decreasing,there are 5 grades of backlight movement speeds.

RISE

Backlight recording

FN+ [Tab] : Enter/exit custom light recording mode

A. The backlight recording method is as follows.

Press FN+ [←] to game mode (1-7/Q/W/E/R/A/S/D/F light up), press FN+Tab to enter recording mode, then you can select the key you want to light up. When finished, press FN+ [Tab] to save the record.

B. When in recording mode, the keyboard cannot be used for other functions.

Media key :

Key	Function	Key	Function
FN+ [A] :	Play/Pause	FN+ [F] :	Volume -
FN+ [S] :	Previous	FN+ [G] :	Volume +
FN+ [D] :	Next	FN+ [H] :	Mute

Function keys:

	Function		Function
FN+ [1 ! F1] :	F1	FN+ [Esc] :	`
FN+ [2 @ F2] :	F2	FN [Shift] + [Esc] :	~
FN+ [3 # F3] :	F3	FN+ [U PrtSc] :	Prtsc

FN+ [4 $ F4] :	F4	FN+ [I ScrLK] :	Scrlk
FN+ [5 % F5] :	F5	FN+ [O Pause] :	Pause
FN+ [6 ^ F6] :	F6	FN+ [J Ins] :	Ins
FN+ [7 & F7] :	F7	FN+ [K Home] :	Home
FN+ [8 * F8] :	F8	FN+ [L PgUp] :	PgUp
FN+ [9 (F9] :	F9	FN+ [M Del] :	Del
FN+ [0) F10] :	F10	FN+ [, < End] :	End
FN+ [- _ F11] :	F11	FN+ [. > PgDn] :	PgDn
FN+ [= + F12] :	F12	FN+ [Win] :	Lock/Unlock Win key

FN+ [↓] : 4 directional keys and the corresponding key function swap, then press once to restore the original key function.

Troubleshooting steps:


1.Insert the USB cable into another USB port of the computer.
2.If you were using a USB hub, try to connect the keyboard directly with your computer.
3.It would be better to plug it into USB ports locating on the back of the chassis instead of those on the front
4.Check USB hub for foreign objects or dust
5.Unplug and reinsert the USB connector
6.Restart the computer.

RISE

MANUAL DE INSTRUÇÕES
TECLADO MECÂNICO GM1

CREATE FOR GAME

RISE

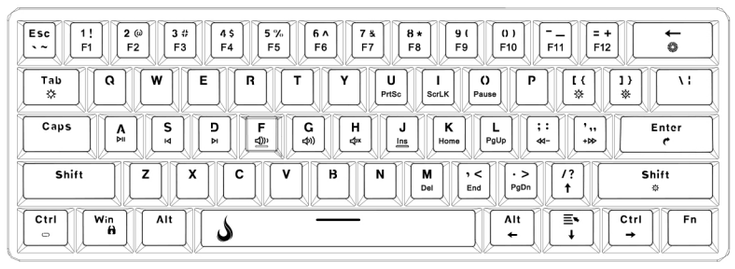

Especificação do teclado:

Tipo de interface: USB Tipo C
Tamanho: 292*102*39mm
Tensão operacional: 5V±0,5V
Corrente operacional: ≤300mA
Vida útil das teclas: 50.000.000 vezes
Comprimento do cabo: 1,5m
Compatível com Windows 2000/XP/Vista/Win7/Win8/Win10

Conectando-se ao seu computador

1. Ligue seu computador.
2. Insira a interface USB do teclado em uma porta USB do seu computador (é melhor escolher a porta USB localizada na parte traseira do chassi em vez das da frente)
3. Aguarde 1 minuto e seu teclado será lido automaticamente pelo seu computador sem a necessidade de driver extra.
(Observação: este é um teclado plug & play, sem necessidade de driver.)

Ajuste da retroiluminação do LED:

1.FN+ [Backspace] : 21 Modos de iluminação

2.FN+ [Enter] : Restaura as configurações de fábrica do teclado

3.FN+ [Ctrl] : Liga/desliga a retroiluminação

4.FN+ [Shift] : Troca de cor da retroiluminação

FN+ [] : Aumenta o brilho da retroiluminação, há 5 níveis de brilho da retroiluminação.

FN+ [] : Diminui o brilho da retroiluminação, há 5 níveis de brilho da retroiluminação, incluindo 1 nível para desligá-lo.

FN+ [Esc] : Aumenta a velocidade dos efeitos da retroiluminação, há 5 níveis de velocidade dos efeitos da retroiluminação.

FN+ [] : Diminui a velocidade dos efeitos da retroiluminação, há 5 níveis de velocidade dos efeitos da retroiluminação.

Gravação da retroiluminação do LED:

FN+ [Tab] : Entrar/sair do modo de gravação do led personalizado.

A. O método de gravação do led é o seguinte

Pressione FN+ [Backspace] Para o modo de jogo (1-7/Q/W/E/R/A/S/D/F acendem), pressione FN+Tab para entrar no modo de gravação, então você pode selecionar a tecla que deseja acender.

Quando terminar, Pressione FN+ [Tab] para salvar a gravação.

B. Quando estiver no modo de gravação, o teclado não pode ser usado para outras funções.

Teclas de mídia

Teclas	Função	Teclas	Função
FN+ [A] :	Play/Pause	FN+ [F] :	Volume -
FN+ [S] :	Anterior	FN+ [G] :	Volume +
FN+ [D] :	Próximo	FN+ [H] :	Mudo

Teclas de função

Teclas	Função	Teclas	Função
FN+ [F1] :	F1	FN+ [Esc] :	`
FN+ [F2] :	F2	FN [Shift] + [Esc] :	~
FN+ [F3] :	F3	FN+ [U] :	Prtsc

FN+ [F4] :	F4	FN+ [I] :	Scrlk
FN+ [F5] :	F5	FN+ [O] :	Pause
FN+ [F6] :	F6	FN+ [J] :	Ins
FN+ [F7] :	F7	FN+ [K] :	Home
FN+ [F8] :	F8	FN+ [L] :	PgUp
FN+ [F9] :	F9	FN+ [M] :	Del
FN+ [F10] :	F10	FN+ [] :	End
FN+ [F11] :	F11	FN+ [] :	PgDn
FN+ [F12] :	F12	FN+ [Win] :	Lock/Unlock Win key

FN+ [] : Ajusta a função para ser utilizado as teclas direcionais, pressione novamente para restaurar a função original da tecla.

Solução de problemas de etapas:

1. Insira o cabo USB em outra porta USB do computador.
2.Se você estava usando um hub USB, tente conectar o teclado diretamente ao seu computador.
3. Seria melhor conectá-lo às portas USB localizadas na placa mãe em vez do USB frontal do gabinete
4. Verifique o hub USB quanto a objetos ou poeira
5. Desconectar e reinserir o conector USB
6. Reinicie o computador.





Diagrama de teclas para o uso em abnt2 português

[´ = Acento agudo

[{ = Colchete / chave

] } = Colchete / chave

Ç = Cedilha

~ ^ = Acento circunflexo / Til

; : = Vírgula / dois pontos

Alt + W ? = Interrogação

Alt + E ° = Grau

Alt + Q / = Barra