
RISE


AIR COOLER G800 ARGB

USER MANUAL

① Parts List

CPU Cooler
(AMD mounting bracket pre-installed)

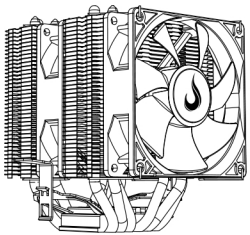

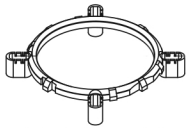

Intel mounting bracket



Transparent nail




Black nail



Thermal paste


② Installation

Step 1

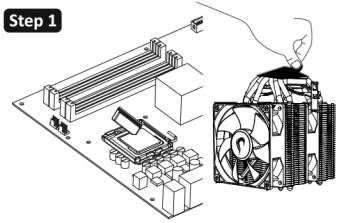


1. Apply thermal grease evenly on the CPU.
2. Remove the protective film from the bottom of the heat sink.

Step 2

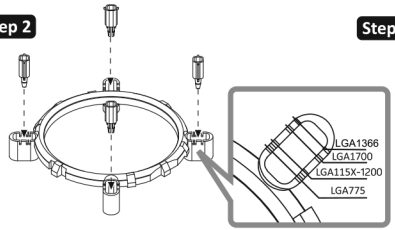


Insert the transparent peg into the correct Intel mounting bracket hole.
(AMDCPU installation: Please install directly from Step4-2.)

Step 3

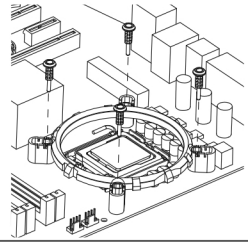

1. Place the mounting bracket into the hole on the motherboard.
2. Insert the black stud into the transparent nail mounting bracket.


Step 4-1

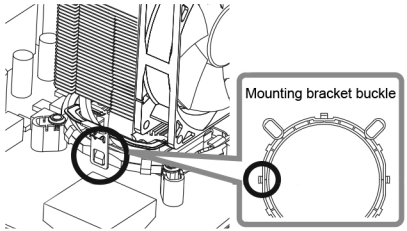

1. First fasten the fastener on one side of the radiator into the mounting bracket.
2. Then, the other side of the buckle is buckled into the bracket to complete the installation.


Note: Please correctly position the air outlet of the radiator.

Step 4-2

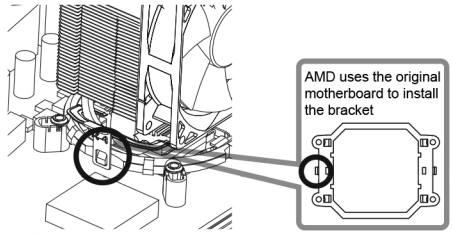


1. First fasten the fastener on one side of the radiator into the AMD mounting bracket.
2. Then, the other side of the buckle is buckled into the bracket to complete the installation.

Step 5

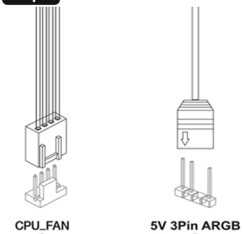

Connect the fan 4-pin socket to the CPU FAN socket.
Connect the ARGB socket to a 5V+3 pin ARGB socket.

! Notice

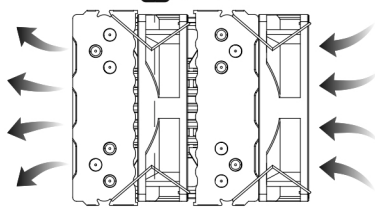

Note: Please correctly position the air outlet of the radiator.

RISE


RISE


AIR COOLER G800 ARGB

MANUAL
DO USUARIO

① Lista de peças

CPU Cooler
(suporte de montagem AMD pré-instalado)

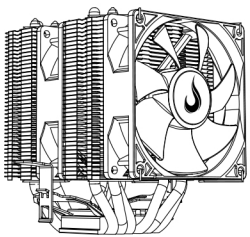

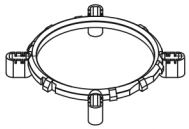

Suporte de montagem intel



Pinos de encaixe transparente




Pinos de fixação preto



Pasta térmica


② Instalação

Etapa 1

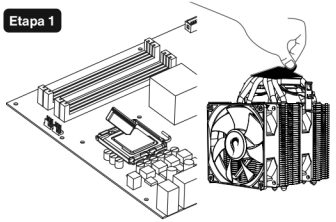

1. Aplique a pasta térmica uniformemente no CPU.
2. Remova a película protetora da parte inferior do dissipador de calor.


Etapa 2

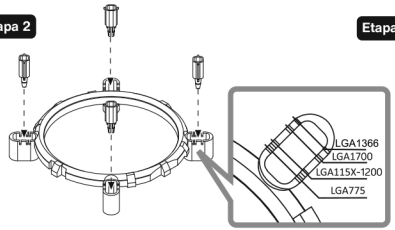

Insira o pino transparente no orifício correto do suporte de montagem Intel.


(Instalação da CPU AMD: instale diretamente da Etapa 4-2.

Etapa 3

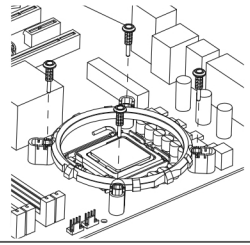

1. Coloque o suporte de montagem no orifício da placa-mãe.
2. Insira o pino preto no suporte de montagem no pino transparente.


Etapa 4-1

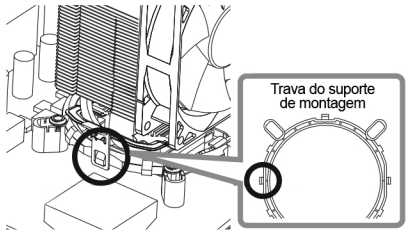

1. Primeiro aperte a trava de um lado do dissipador no suporte de montagem.
2. Em seguida, o outro lado da trava maior do dissipador trave no suporte para concluir a instalação.


Nota: Posicione corretamente a saída de ar do dissipador.

Etapa 4-2

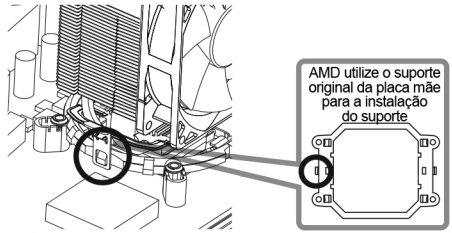


1. Primeiro aperte a trava de um lado do dissipador no suporte de montagem.
2. Em seguida, o outro lado da trava maior do dissipador trave no suporte para concluir a instalação.

Etapa 5

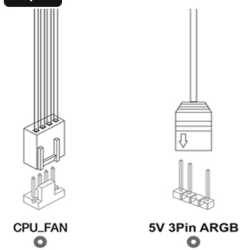

Conecte o cabo 4p da fan no conector CPU FAN.
Conecte o cabo ARGB a uma conexão 3p 5V ARGB de uma placa mãe ou controladora ARGB.

ATENÇÃO

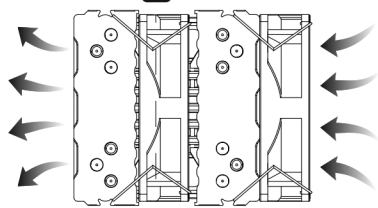

Nota: Posicione corretamente a saída de ar do dissipador.

RISE