RISEMODE

# SMART SCREEN SUPPORT 9.2"




# USER MANUAL

RISEMODE.COM

## Installation Instructions


**1. Open your phone's camera (or a QR code reader app).**
**2. Point the camera at the QR code.**
**3. Tap the link and you will be redirected to our website.**
**4. Click "Download".**
**5. Once the download is complete, open the file and follow the installation instructions.**

2. **Device Installation:** The package contains 2 connecting cables.
Follow these installation methods:
**Option 1 - Connection via USB Cable:** Connect the USB-C end to the secondary screen and the USB-A end to the rear interface of the computer (using the front USB port is not recommended).
**Option 2 - Connection via 4PIN/9PIN Cable:** Connect the 4PIN end to the secondary screen and the 9PIN end to the computer motherboard.
Choose one of the two cables; do not use both at the same time.

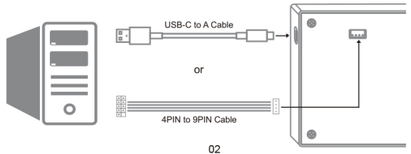





1. **Home Screen:** The home screen supports custom editing and system information monitoring.

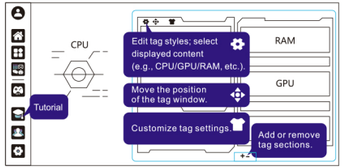



2. **Game Mode:** To ensure smooth game operation and reduce resource consumption, it is recommended to enable Game Mode.When Game Mode is enabled, the dynamic backgroe will stop working.

3. **Device List and Selection**

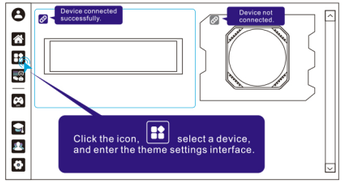





4. **Theme Settings:** Left-click the mouse to switch themes; right-click the mouse and select "Save as Custom Theme"; **Featured Themes do not support editing but can be deleted.**

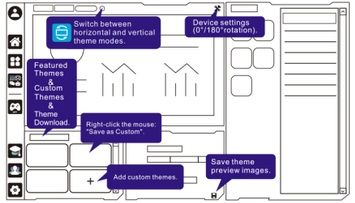



5. **Theme/Plugin Editing:** Left-click and drag the mouse to place different plugins in the screen display area. Supports proportional scaling and rich custom editing.

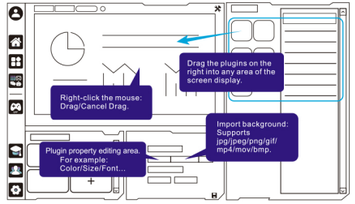





6. **Theme Download:** Click "Theme Download" to jump to the mPanel theme download page.
**Theme Import:** Right-click - Theme Import - Select theme file.
**Theme Export:** Custom Theme - Right-click - Theme Export.
**Theme Sharing:** Right-click - Theme Sharing - Upload content - Wait for review.

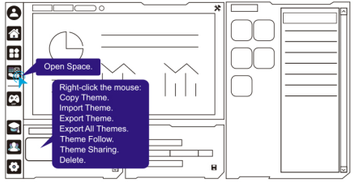


7. **Carousel Settings:** Supports carousel for up to 8 themes; you can drag themes to customize the order; supports setting the display interval for each theme separately.

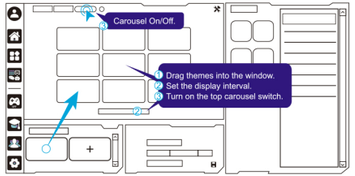




## Product Configuration

| | |
|---|---|
| Product Name | Computer Secondary Screen. |
| Basic Configuration Parameters | Operating Voltage: 5V.<br>Connection Method: Wired.<br>Interfaces: USB-C / 4PIN. |
| Background Formats | jpg/jpeg/png/gif/mp4/mov/bmp |
| Product Dimension | 244.66*63.14*12mm ±0.2mm |
| LCD Size | 9.2 Inches. |
| Material | Aluminum Alloy. |
| Packaging List | Computer Secondary Screen *1.<br>USB-C to A Cable *1.<br>4PIN to 9PIN Cable *1.<br>User Manual *1.<br>L-Shaped Bracket *1. |
| Length of USB-C to A Cable | 1.5m. |
| Length of 4PIN to 9PIN Cable | 50cm. |
| Colors | White / Black. |
| Supported Operating Systems | Windows 7 64-bit or above. |

RISEMODE

RISEMODE.COM


## Instruções de Instalação

**1. Abra a câmera do seu celular (ou um app de leitura de QR Code)**
**2. Aponte a câmera para o QR Code.**
**3. Toque no link e você será direcionado para o nosso site.**
**4. Clique em "Download"**
**5. Após concluir o download, abra o arquivo e siga as instruções de instalação.**

**2. Instalação do Dispositivo:** A embalagem contém 2 cabos de conexão.
**Siga os métodos abaixo:**


**Opção 1 - Cabo USB:** USB-C -> tela; USB-A -> porta traseira do PC.
(evite a USB frontal).

**Opção 2 - Cabo 4PIN/9PIN: 4PIN -> tela; 9PIN -> placa-mãe.**
Use apenas um cabo por vez (não use ambos).

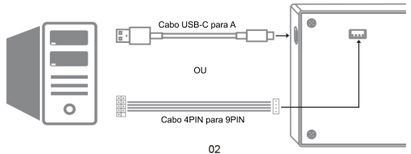





1. **Tela Inicial:** A tela inicial suporta edição personalizada e monitoramento de informações do sistema

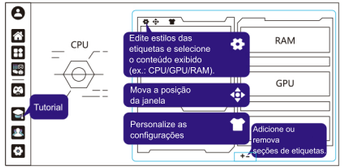



2. **Modo Jogo:** Para garantir jogos mais fluidos e reduzir o consumo de recursos, recomenda-se ativar o Modo Jogo. Quando ativado, o fundo dinâmico deixa de funcionar.

3. **Lista e Seleção de Dispositivos**

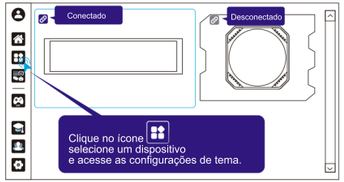





**4. Configurações de Tema:** Clique com o botão esquerdo para alternar temas; clique com o botão direito e selecione "Salvar como Tema Personalizado".
**Temas em Destaque não permitem edição, mas podem ser excluídos.**

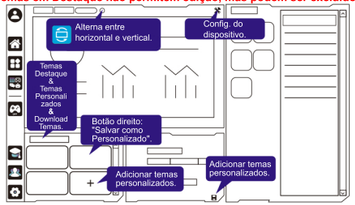


**5. Edição de Tema/Plug-in:** Clique e arraste para posicionar plug-ins na área de exibição. Suporta redimensionamento proporcional e diversas opções de personalização.

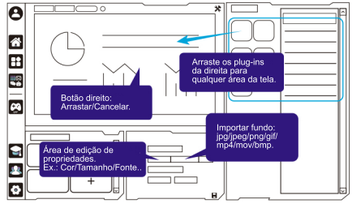





**6. Baixar Temas:** Clique em "Baixar Temas" para abrir a página do mPanel.
**Importar Tema:** Botão direito -> "Importar Tema" -> selecione o arquivo.
**Exportar Tema:** Tema Personalizado -> botão direito -> "Exportar Tema".
**Compartilhar Tema:** Botão direito -> "Compartilhar Tema" -> envie o conteúdo -> aguarde a revisão




**7. Configurações do Carrossel:** Carrossel com até 8 temas; arraste para ajustar a ordem e defina o intervalo de exibição de cada tema.

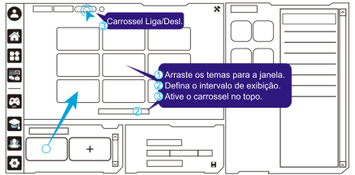




Instruções de Instalação

| | |
|---|---|
| Nome do Produto | Tela Secundária p/ PC. |
| Parâmetros básicos de configuração | Tensão de operação: 5V.<br>Método de conexão: com fio.<br>Interfaces: USB-C / 4PIN. |
| Formatos de fundo | jpg/jpeg/png/gif/mp4/mov/bmp |
| Dimensões do produto | 244.66*63.14*12mm ±0.2mm |
| Tamanho da tela | 9,2 polegadas. |
| Material | Liga de alumínio. |
| Conteúdo da embalagem | Tela Secundária p/ PC *1.<br>Cabo USB-C p/ A *1.<br>Cabo 4PIN p/ 9PIN *1.<br>Manual do Usuário *1.<br>Suporte em L *1. |
| Comp. cabo USB-C-A | 1,5 m. |
| Comp. cabo 4PIN-9PIN | 50 cm. |
| Cores | Branco / Preto. |
| Sistemas suportados | Windows 7 64 bits ou superior. |